

# Avoid touching frequently used door handles and elevator buttons.

## Touchless door access



Touchless Unlock

There is no need for your card to touch the Kisi reader - just hold your phone within a safe distance or unlock from within the App.



Automatic Door Opening

After unlocking the door, an electric device opens the door. Alternative, more hygienic methods to grabbing a handle are recommended, such as using your elbow to open the door.



Wave to Exit

Install "Wave to Exit" sensors instead of push buttons in order to allow users to unlock doors via their mobile app to exit.

## Stay in control remotely



Touchless Elevator Floor Unlock

*For relay based elevators:* Avoid pressing shared community buttons and select the floor on your phone instead.

Touchless Dispatch Panel

*For dispatch based elevators:* Avoid touching the dispatch panel by selecting your floor on your phone instead.



Elevator Floor Marking

To give guidance to passengers on elevators, marked floors encourage safe distancing and orientation.

Kisi Inc.

45 Main Street,  
11201 Brooklyn  
USA

sales@getkisi.com  
getkisi.com

**kisi**