



# Avoid touching frequently used door handles and elevator buttons

## Touchless Door Access



### Touchless Unlock

There is no need for your card to touch the Kisi reader - just hold your phone within a safe distance or unlock from within the App.



### Automatic Door Opening

After unlocking the door, an electric device opens the door. Alternative, more hygienic methods to grabbing a handle are recommended, such as using your elbow to open the door.




### Wave to Exit

Install "Wave to Exit" sensors instead of push buttons in order to allow users to unlock doors via their mobile app to exit.

---

## Touchless Elevator Access

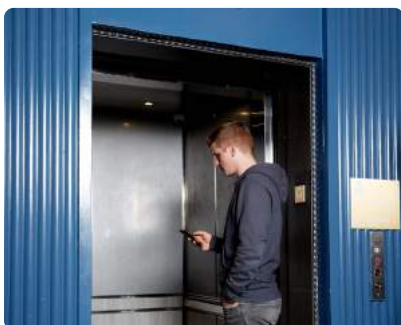


### Touchless Elevator Floor Unlock

For relay based elevators: Avoid pressing shared community buttons and select the floor on your phone instead.



### Touchless Dispatch Panel

For dispatch based elevators: Avoid touching the dispatch panel by selecting your floor on your phone instead.

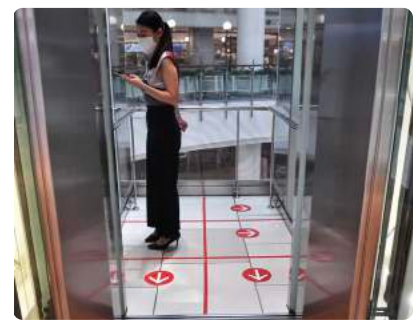

### Elevator Floor Marking

To give guidance to passengers on elevators, marked floors encourage safe distancing and orientation.